




BUTLERIB II

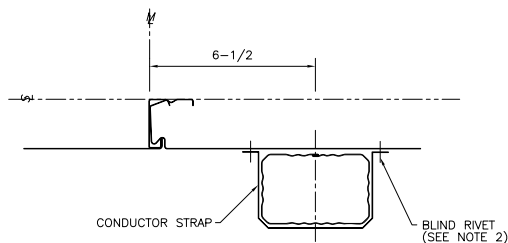


FLAT STYLWALL II

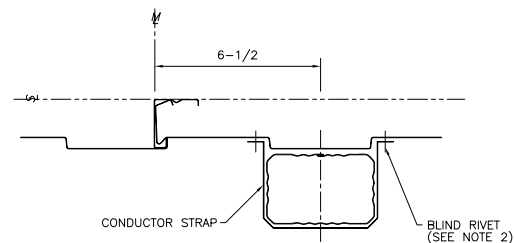


FLUTED STYLWALL II

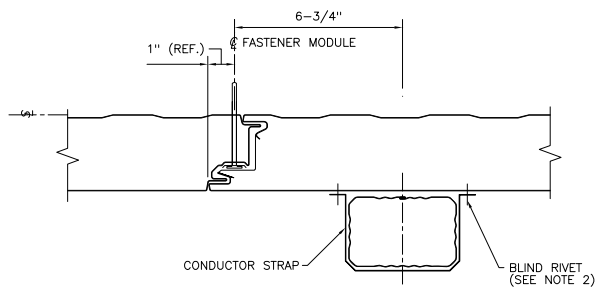


THERMAWALL FLAT/TEXTUREWALL

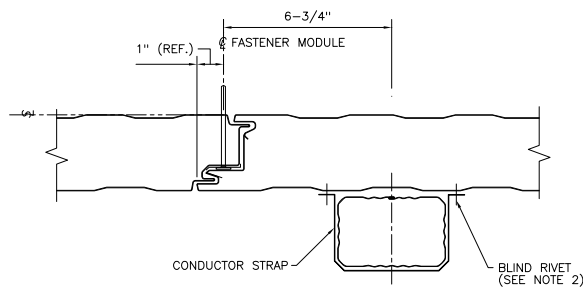


THERMAWALL FINELINE

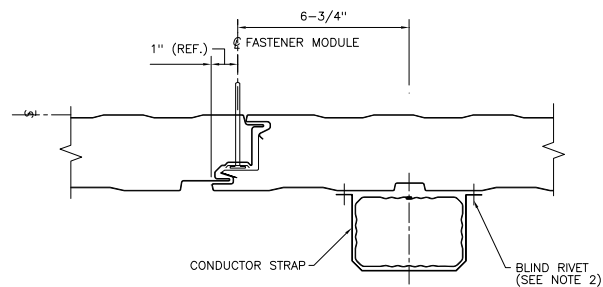

THERMAWALL FLUTED

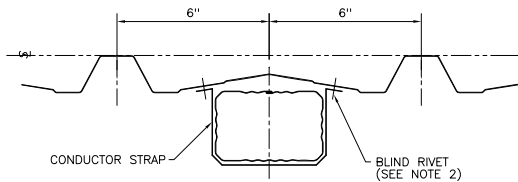

SHADOWALL

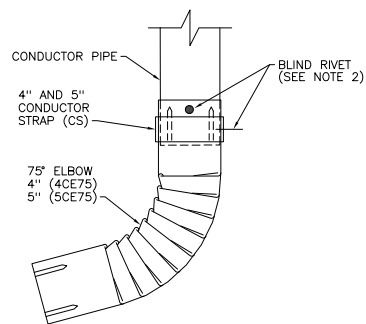

SHOE INSTALLATION
(TYPICAL SECTIONS - ABOVE)

NOTES:

1. LOCATE CONDUCTOR STRAPS AT TOP, BOTTOM AND JOINTS OF VERTICAL 4" CONDUCTOR PIPES. 5" CONDUCTOR PIPES MAX. 6'-0" O.C. SPACING.
2. FIELD DRILL 9/64" FOR BLIND RIVETS.
USE LAVA BLIND RIVETS (097124) FOR:
-HUNTER GREEN -SANTA FE RED
-LAVA -SOLAR GREEN
-SANTA ANNA BLUE -TERRA BROWN
USE ALUMINUM BLIND RIVETS (096884) FOR:
-ALZN -PRIME PAINT
-BIRCH WHITE -SANDALWOOD
-COUNTRY WHEAT -SHELL GRAY
-MESA GRAY -SOLAR WHITE
USE BLIND RIVETS (097580) FOR:
100-COOL IGLOO WHITE 111-COOL MAJESTIC BLUE
101-COOL IVORY WHITE 112-COOL SHELL GRAY
102-COOL SOLAR WHITE 113-COOL DESERT BEIGE
103-COOL BRICK RED 115-COOL OCEAN BLUE
104-COOL COUNTRY WHEAT 116-COOL GRAY STONE
105-COOL HARVEST 117-COOL COPPER PENNY
106-COOL SAFARI BROWN 118-COOL METALLIC SILVER
107-COOL PALM GREEN 119-COOL JADE GREEN
108-COOL MARSH GREEN 120-COOL BRIGHT RED
109-COOL EMERALD GREEN 121-COOL PARCHMENT
110-COOL ONYX BLACK 122-COOL OLD TOWN GRAY
3. FOR PART SCHEDULES, SEE DWG. P-105224 (NARROW GUTTER), AND P-080091 (WIDE GUTTER).

4" AND 5" CONDUCTOR PIPE
AND STRAP DETAILS (ALL WALLS)

DRAWN BY	CHECKED BY	GROUP NUMBER: 26-008-01
FIRST RELEASE DATE	REVISION DATE	B P-105228 01
01/21/10	05/19/10	

REVISION NUMBER 1

REVISE BLIND RIVET COLOR NOTE.

DATE
05/19/10
RHE BAP